


Quick Star Guide – Charging Terminal RFT02 for EHRLE-CarWash-Key



- **Unpack UnicoCard software and run the setup**

Important: When asking “Do you want to install RFTech USB driver?”, select “Yes” ->

- After installation connect desktop reader to PC via USB cable
- Start the software by double-clicking on the icon „UnicoCard“
- Go to Options ->Language to set the language for the software
- After selecting the language, click on the „Read Card“ button ->
- Now a password must be entered. This code can be found on the keyreader of the carwash or on the currency list. For example, the code might be 100-1052-1000. The first 3 digits form the Administrator, the following 4-digit number forms the location and the last 4-digit part forms the Access level.

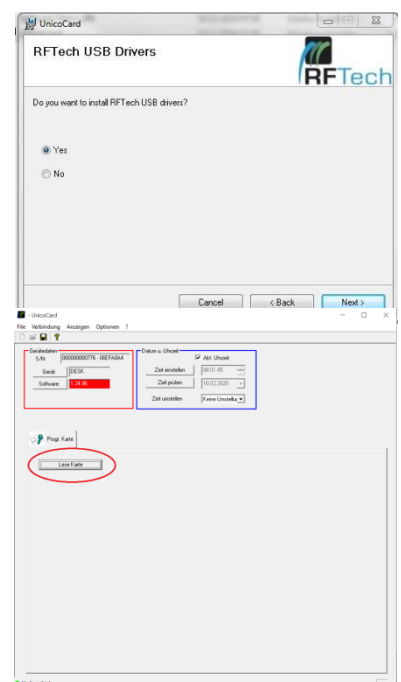

Password


Administrator:	100	Location:	1052	Access level:	1000	OK	Cancel
----------------	----------------------------------	-----------	-----------------------------------	---------------	-----------------------------------	-----------------------------------	---------------------------------------

Confirm the password with „OK“.


INITIALIZE NEW KEYS

➤ Take NEW or NOT initialized keys and place them on the desktop reader


- o Switch to the „Format“ tab
- o You can add the application to your key by clicking the button „Add Application“

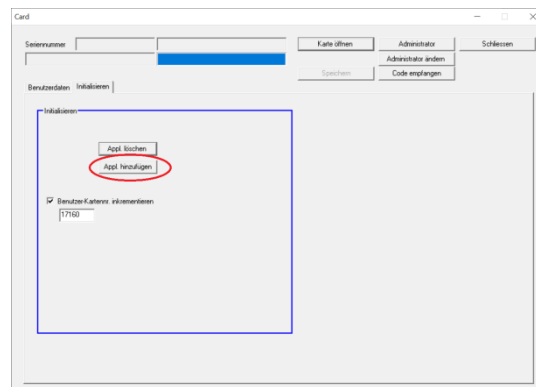

- o If the transfer was successful, the following will appear on your screen:

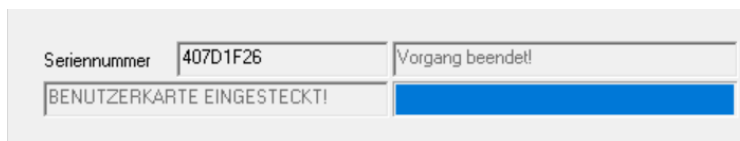

- o Now switch to the tab „User data“
- o There you can enter the amount you want to load on the key in the “credit” input field.
- o By clicking on „Set credit“, the amount will be transferred to the key.

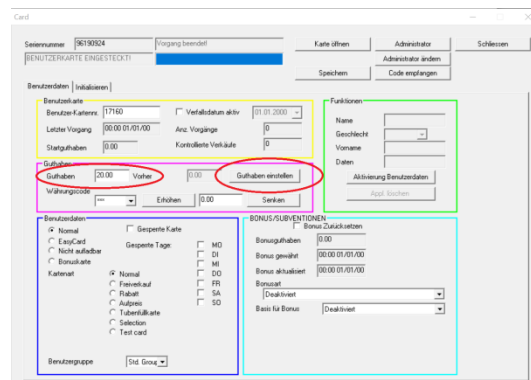

- o After the transfer, you can remove the key from the desktop reader.
- o The key is now charged and ready to use.

ERRORS➤ **The following errors may occur:**

- o Opening a key without initialization leads to the message :**Virgin Key**

Seriennummer	96190924	Virgin Key, code: 29
UNBENUTZTE KARTE EINGESTECKT!		

To resolve this issue, the key must first be initialized. The instructions for this can be read on page 2.

- o If the desktop reader's code does not match the code of the key, it will result in a message:
CE_AUT_SYSTEM

Seriennummer	88782533	CE_AUT_SYSTEM, code: 92
BENUTZERKARTE EINGESTECKT!		

The code of the desktop reader can be modified using the „Administrator“ button to fit the code of the key.

- o If the desktop reader does not recognize a key, the following error occurs: **Card not present**

Seriennummer		Card is not present, code: 3

To fix the error, you need to check if there is a key on the reader at all. If so, it must be in position, like the key on page 2.

Since the key charging is a radio transmission. Repeated attempts are not to be considered errors!